

PRODUCT CATALOGUE

Prestige DIY Products are perhaps the finest PVC systems available for your home.

Constructed from premium quality PVC, these products have been beautifully designed and are *engineered to last*.

Prestige DIY Products™ offer the *elegant beauty* of traditional wood features, while being *virtually maintenance-free*. With the Prestige Advantage, you can expect to enjoy your product for as long as you own your home.

The *Prestige Products*™ **Advantage**

Beautiful

- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles

Easy Installation

- Complete Kit, with Fasteners & Adhesive
- No Special Tools Needed
- Easy Innovative SmartLock™ Corners
- Flat-Pack for Safe & Easy Transportation

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints









PRODUCT CATALOGUE INDEX

| Section I The Prestige Advantage | | Section IV Prestige Gables | |
|---|--------------------------|--|-------------------------------|
| Ordering Procedures & TimelinesPaint Specifications Standard Colours | Pg. 1 Pg. 2-3 | Gable Detail BrochureGable Detail ProfilesGable Specifications Sheet | Pg. 24-25 Pg. 26 Pg. 27 |
| Section II Prestige Columns | | Gable Scroll Profiles | Pg. 28 |
| Column Brochure | Pg. 4-7 | Assembly & Installation Guide | Pg. 29-30 |
| Taper Spec Sheet w/ Custom Order Form | Pg. 8-9 | - Prestige Louvres | |
| Square Spec Sheet w/ Custom Order Form Proctige Promium Columns | . Pg. 10-11 Pg. 12-13 | Louvre BrochureLouvre Profiles/Specifications | Pg. 31 Pg. 32 |
| Prestige Premium ColumnsFLEX Columns - Brochure | Pg. 12-13 Pg. 14 | o zouvie i romes, specimeations | 18.32 |
| Installation Guide | Pg. 15-17 | Section VI Prestige Brackets | |
| Prestige Premium Columns | Pg. 18 | Bracket Brochure | Pg. 33-34 |
| Section III Prestige Shutters | | Bracket Profiles | Pg. 35-36 |
| | Dg 10 20 22 | | |
| • FLEX Shutter | Pg. 19-20, 23 | Section VII Prestige Soffit | |
| - Brochure Specifiations Sheet | Pg. 21 Pg. 22 | Soffit BrochureSpecification Sheet | Pg. 37,41 Pg. 38 |
| | . 8. == | Installation Guide | Pg. 39-40 |
| | | Prestige Premium Columns | Pg. 42 |
| | | Custom Work | Pg. 43 |
| | | Prestige Products Warranty | Pg. 44 |



The Prestige Advantage

Beautiful

- Classic Architectural Column Look and Feel
- Wide Assortment of Column Styles
- Various Heights Available
- Various Widths Available
- SmartLock™ Corners for Seamless Fit
- No Visible Fasteners
- Paint Friendly with Acrylic Latex Paints
- Custom Styles Available

Fast & Easy Installation

- Complete Kit, including Fasteners and Adhesive
- PVC Cuts and Fastens like Wood, using Woodworking Tools
- No Special Tools Needed
- Innovative Precision Engineered SmartLock™ Mitered, Locking Corners for Rapid and Secure Assembly
- Comprehensive, Easy-to-Follow Installation & Painting Instructions Included
- Safe and Easy Storage and Transportation with Flat-Pack Packaging

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather Resistant
- Decay Resistant
- Insect Resistant
- Zero Water Absorption
- Direct Masonry Contact
- Paint Friendly with Acrylic Latex Paints
- 30 Year Limited Warranty



Ordering Procedure & Timelines

Prestige DIY Products are available at retail lumber yards.

Ask your contactor sales counter or contact us at www.prestigediy.com to refer you to a local dealer.

It is our privilege to provide our products and services. Our commitment is to provide quality. Along with our distributor and dealers, we strive to shorten project deadlines.

2-3 Week cycle- Standard Core and FLEX Column/Shutters
3-4 Week cycle- Custom Orders
3-6 Week cycle- Paint Order (varies depending on size of order)

Please note that milling processes and tooling may change do to advances in machining.


Confirm with current processing if matching or if viewed on past information platforms distributed by Prestige DIY Products.

Prestige DIY Products innovate PVC building products to be <u>EASY</u> for Homeowners and <u>FAST</u> for the professional tradesman.





Stock Colours

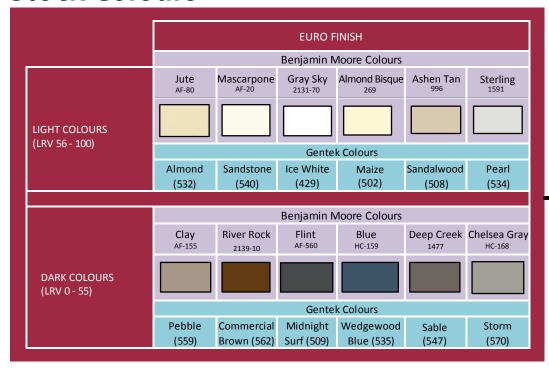

* <u>Custom Colours & Stains</u>
Custom surcharge will apply
Speak with your PrestigeDIY
Representative for more information.

Stock Paint: 30% Surcharge on Material Value

Dark Colours

* Dark Colour Paints have heat reflective qualities.

Standard *EURO FINISH* on all dark painted products.

Stock Stains



Cherry DD#9571



Espresso DD#9575



Teak DD#9512



Mahogany DD#9509

Stain Finishes on Prestige DIY Products!

Stock Stain: 45% Surcharge on Material Value with Top Clear Coat





PAINT SPECIFICATIONS

Preparation & Application

Your Prestige DIY Products™ are manufactured using premium free-foam cellular PVC and do not require painting to validate the warranty. If painting is preferred, please use the guidelines below.

Surface Preparation

Prestige DIY Products[™] can be painted to achieve the desired look or accent colour of your home. To ensure good paint adhesion, the surface of the pvc product should be clean, dry, and free of dirt, mildew, chalk, grease and any other surface contaminants before paint application. Prior to cleaning it is a good practice to fill any holes and remove any marks or blemishes that may appear during the installation process with an exterior filler, (for example, sandable Bondo).

Cleaning can be accomplished using a cloth and a mixture of mild detergent and water. Other cleaning agents include a mild household spray cleaner, a degreaser, or alcohol.

Coating Specification

A 100% acrylic latex or 100% acrylic latex with a urethane additive should be used to achieve superior coating durability and flexibility. Only light to medium coloured paints with a light reflective value (LRV) of 55 units or greater should be applied to Prestige DIY Products™. *Using a paint with a LRV below 55 units will void our product warranty.*

Paint manufacturer recommendations include priming with an exterior 100% acrylic latex primer, such as Zinsser Bulls Eye 123, followed by two coats of exterior 100% acrylic latex satin finish paint. Aquasur paint does not require a primer coat.

Application

Apply paint when the air and surface temperatures are 2°C (35°F) or above, and when the air and surface temperatures will remain above this temperature for the next 24 hours. Avoid painting early in the morning or late in the day when dew and condensation are likely to form, or when rain or life of the paint, always protect it from freezing.

Apply primer and topcoats using the following methods:

- Brush: Use a nylon/polyester brush.
- Roller: Use a 3/8" 3/4" nap synthetic roller.
- Spray: Airless Pressure...2000 psi Tip...015"-.019"

Typical Drying Times (Dry Time at 25°C (77°F); 50% Relative Humidity):

- To the Touch: 30 minutes To Recoat: 4 hours
- To Handle: 1 hour To Full Cure: 30 days

Considerations

- Higher quality paints typically outperform lower quality paints.
- Temperature, humidity, wind, and the amount of direct sunlight at time of application will affect paint drying times.
- Prestige Products[™] are impermeable to moisture; it may take as long as 45 days for paint application to fully cure.
- Paint failures on wood are due primarily to moisture cycling. Since Prestige Products™ cannot absorb moisture, paints will adhere better and for a much longer time when applied to premium PVC versus wood.
- All painted Prestige Products ship with a small amount of touch up paint or stain top coat. Stain may require 2 or 3 coats to achieve desired tone.

Disclaimer: Decor Innovations is not liable for paint used on Prestige DIY Products™ and/or the result of its use.







Beautiful

- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles
- Available in Smooth or Wood Grain



Easy Installation

- Complete Kit, with Fasteners & Adhesive
- No Special Tools Needed
- Easy Innovative SmartLock™ Corners
- Flat-Pack for Safe & Easy Transportation

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- · Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints



Innovative PVC Systems

Smart & Beautiful

Prestige Columns™ feature beautiful, unblemished column panel faces. Each panel incorporates our innovative SmartLock™ Corner technology, resulting in a column that is assembled without the need for nails or screws marring the panel face.

The SmartLock™ Corner system also ensures true, well-defined corners, and simplifies installation.

Square Columns, Tapered and Non-Tapered Profiles

Available in both tapered and non-tapered profiles, and with a variety of panel styles to choose from.

Prestige Columns™ are the preferred choice for premium quality, square architectural columns.

Prestige Columns™ are decorative columns only and are NON-LOADBEARING. If the column needs to support any weight, a sufficient load-bearing structural post must be in place before installation begins. Please consult your local building and safety codes for specific requirements.





Prestige Columns™ Standard Sizes


Square (Non-Tapered)

| Column Widths | Pane | Styles | | | | |
|--------------------------|-------|--------|--------|---------------------|--------------------------|-------------------------|
| (Nominal Sizes - Inches) | Plain | Raised | Fluted | Recessed -Square | Recessed -Raised Trim | Recessed -Flush Trim |
| 6" x 6" | • | • | • | | | |
| 8" x 8" | • | • | • | • | • | • |
| 10"x 10" | • | • | ٠ | • | • | • |
| 12" x 12" | • | • | • | • | • | • |
| 14" x 14" | • | • | • | • | • | • |

Tapered

| Column Widths | Pane | el Styles | | | | |
|-------------------------|-------|-----------|-----------------|---------------------|--------------------------|-------------------------|
| (Actual Sizes - Inches) | Plain | Raised | F l uted | Recessed -Square | Recessed -Raised Trim | Recessed -Flush Trim |
| 9" x 6" | • | | | | | |
| 10" x 7" | • | • | | | | |
| 12" x 8" | • | • | | • | • | • |
| 13" x 9" | • | • | | • | • | • |
| 16" x 12" | • | • | | • | • | • |

Additional sizes available.

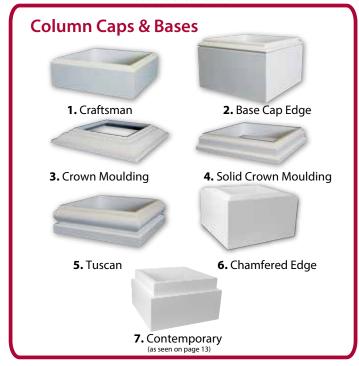

Cap/Base Height

| | | 2" | 4" | 5″ | 6" | 8" | 10" |
|------------------|----|----|----|----|----|----|-----|
| Cap/Base Profile | 1. | | • | | • | • | |
| Pro | 2. | | | | • | • | |
| ase | 3. | | • | • | • | | |
| p/B | 4. | • | | | | | |
| Ca | 5. | | | | • | • | • |
| | 6. | | | | • | • | • |
| | 7. | | • | | • | | |



Innovative PVC Systems










Prestige Column Sizes & Reveals - Tapered Columns

| Product Code | Prestige PVC Tapered Columns | Base Width | Top Width | Interior Base Width | Interior Top Width | Column Height | Column Weight |
|------------------|--|---------------|--------------|---------------------------|--------------------------|------------------|------------------|
| | | (inches) | (inches) | (inches) | (inches) | (ft) | (lbs) |
| * CPTPL-0906-048 | Prestige Column - PVC, Square Tapered, Plain Panel, 9" x 6" x 4' | 9" | 6" | 8" | 5" | 48 | 40 |
| * CPTPL-0906-060 | Prestige Column - PVC, Square Tapered, Plain Panel, 9" x 6" x 5' | 9" | 6" | 8" | 5" | 60 | 49 |
| * CPTPL-0906-072 | Prestige Column - PVC, Square Tapered, Plain Panel, 9" x 6" x 6' | 9" | 6" | 8" | 5" | 72 | 49 |
| CPTPL-1208-048 | Prestige Column - PVC, Square Tapered, Plain Panel, 12" x 8" x 4' | 12" | 8" | 11" | 7" | 48 | 40 |
| CPTPL-1208-060 | Prestige Column - PVC, Square Tapered, Plain Panel, 12" x 8" x 5' | 12" | 8" | 11" | 7" | 60 | 49 |
| CPTPL-1208-072 | Prestige Column - PVC, Square Tapered, Plain Panel, 12" x 8" x 6' | 12" | 8" | 11" | 7" | 72 | 49 |
| CPTPL-1309-048 | Prestige Column - PVC, Square Tapered, Plain Panel, 13" x 9" x 4' | 13" | 9" | 12" | 8" | 48 | 40 |
| CPTPL-1309-060 | Prestige Column - PVC, Square Tapered, Plain Panel, 13" x 9" x 5' | 13" | 9" | 12" | 8" | 60 | 49 |
| CPTPL-1309-072 | Prestige Column - PVC, Square Tapered, Plain Panel, 13" x 9" x 6' | 13" | 9" | 12" | 8" | 72 | 49 |
| CPTPL-1612-048 | Prestige Column - PVC, Square Tapered, Plain Panel, 16" x 12" x 4' | 16" | 12" | 15" | 11" | 48 | 40 |
| CPTPL-1612-060 | Prestige Column - PVC, Square Tapered, Plain Panel, 16" x 12" x 5' | 16" | 12" | 15" | 11" | 60 | 49 |
| CPTPL-1612-072 | Prestige Column - PVC, Square Tapered, Plain Panel, 16" x 12" x 6' | 16" | 12" | 15" | 11" | 72 | 49 |

NOTE: * Will Not Fit Around 6" x 6" PT Wood Structure.

Packaging- Standard Kit consists of boxed, 4 column panels, cap/base with adhesive strip, squaring corners, 2 oz. adhesive, fasteners, instructions.

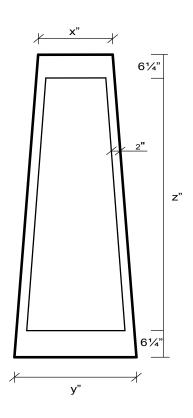



NOTE:

- \bullet 6" 10" columns with square edge recessed panels will use either a 3/8" or a ½" thick backer panel.
- 12" columns and larger, with square edge recessed panels, will use a $\frac{1}{2}$ " thick backer panel.
- All columns with recessed panel with base cap trim will use a 5/8" thick column shaft and backer panel.
- All columns with a base of 16" or larger will use a 5/8" thick column shaft.






R* Υ" R* 3/4" XX" XX" + 3"*

CUSTOM ORDER FORM: TAPERED

| PANEL SIZES | | | |
|--|--|--|--|
| 1. Height (Y") | | | |
| 2. Top Width (X") 3. Bottom Width (XX") | | | |
| Note: Tapered column panels are always actual dimensions. | | | |
| Natural (White) | | | |
| Stain Colour: | | | |
| REVEALS R* All bottom and top panel reveals | | | |
| will be adjusted to 2" above and below chosen skirts. | | | |
| | | | |

| PANEL PROF | ILE | QUANTITY: | | | |
|---|--|--|--|--|--|
| 1. Plain 2. Fluted | П | NOTES: | | | |
| 3. Raised | | | | | |
| 4. Recessed Square Edge Round Edge w/ Base Cap Trim Flush Trim Raised Trim | 1. Single 2. Double 3. 1/3 - 2/ 4. Custor | e Panel // P | | | |

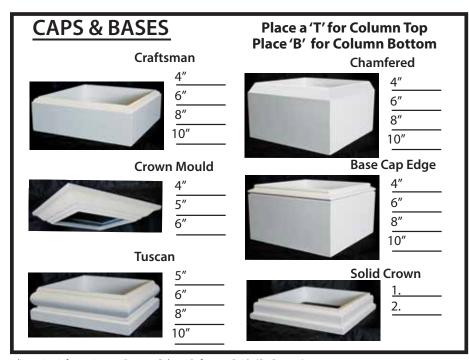

*Tuscan, Chamfer & Solid Crown Add 4"




Prestige Column Sizes & Reveals - Straight Columns


| Product Code | Prestige PVC Square Columns | Outside Dims. (inches) | Inside Dims. (inches) | Column Weight (lbs) |
|------------------|---|------------------------------|-----------------------|------------------------|
| CPSPL-0808-096 | Prestige Column - PVC, Square, Plain Panel, 8" x 8" x 8' | 8" (7 1/4") | 6 1/4" | 40 |
| CPSPL-0808-120 | Prestige Column - PVC, Square, Plain Panel, 8" x 8" x 10' | 8" (7 1/4") | 6 1/4" | 49 |
| CPSPL-1010-096 | Prestige Column - PVC, Square, Plain Panel, 10" x 10" x 8' | 10" (9 3/8") | 8 3/8" | 49 |
| CPSFL-0808-096 | Prestige Column - PVC, Square, Fluted Panel, 8" x 8" x 8' | 8" (7 1/4") | 6 1/4" | 40 |
| CPSFL-0808-120 | Prestige Column - PVC, Square, Fluted Panel, 8" x 8" x 10' | 8" (7 1/4") | 6 1/4" | 49 |
| CPSFL-1010-096 | Prestige Column - PVC, Square, Fluted Panel, 10" x 10" x 8' | 10" (9 3/8") | 8 3/8" | 49 |
| CPSRA-0808-096 | Prestige Column - PVC, Square, Raised Panel, 8" x 8" x 8' | 8" (7 1/4") | 6 1/4" | 40 |
| CPSRA-0808-120 | Prestige Column - PVC, Square, Raised Panel, 8" x 8" x 10' | 8" (7 1/4") | 6 1/4" | 49 |
| CPSRA-1010-096 | Prestige Column - PVC, Square, Raised Panel, 10" x 10" x 8' | 10" (9 3/8") | 8 3/8" | 49 |
| * CPSRS-0808-096 | Prestige Column - PVC, Square, Recessed Panel - Square Edge, 8" x 8" x 8' | 8" (7 1/4") | 5-1/4" | 40 |
| * CPSRS-0808-120 | Prestige Column - PVC, Square, Recessed Panel - Square Edge, 8" x 8" x 10' | 8" (7 1/4") | 5-1/4" | 49 |
| CPSRS-1010-096 | Prestige Column - PVC, Square, Recessed Panel - Square Edge, 10" x 10" x 8' | 10" (9 3/8") | 7-3/8" | 49 |
| * CPSRB-0808-096 | Prestige Column - PVC, Square, Recessed Panel Flush Trim - Base Cap Edge, 8" x 8" x 8' | 8" (7 1/4") | 5-1/4" | 41 |
| * CPSRB-0808-120 | Prestige Column - PVC, Square, Recessed Panel Flush Trim - Base Cap Edge, 8" x 8" x 10' | 8" (7 1/4") | 5-1/4" | 52 |
| CPSRB-1010-096 | Prestige Column - PVC, Square, Recessed Panel Flush Trim - Base Cap Edge, 10" x 10" x 8' | 10" (9 3/8") | 7-3/8" | 52 |
| * CPSRB-0808-096 | Prestige Column - PVC, Square, Recessed Panel Raised Trim - Base Cap Edge, 8" x 8" x 8" | 8" (7 1/4") | 5-1/4" | 41 |
| * CPSRB-0808-120 | Prestige Column - PVC, Square, Recessed Panel Raised Trim- Base Cap Edge, 8" x 8" x 10' | 8" (7 1/4") | 5-1/4" | 52 |
| CPSRB-1010-096 | Prestige Column - PVC, Square, Recessed Panel Raised Trim - Base Cap Edge, 10" x 10" x 8' | 10" (9 3/8") | 7-3/8" | 52 |


NOTE: * Will Not Fit Around 6" x 6" PT Wood Structure.


Packaging- Standard Kit consists of boxed, 4 column panels, cap/base with adhesive strip, squaring corners, 2 oz. adhesive, fasteners, instructions.


Prestige Panel Styles

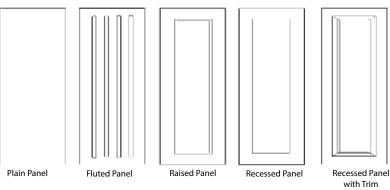



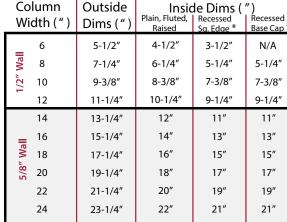

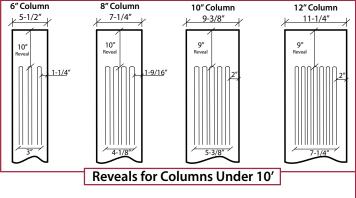

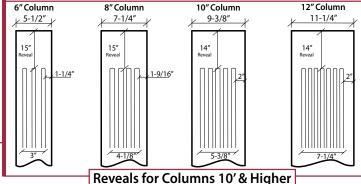

* NOTE:

- For any column skirts above 6" in height, the column reveals will go to 14".
- 6" 10" columns with square edge recessed panels will use either a 3/8" or a ½" thick backer panel.
- 12" columns and larger, with square edge recessed panels, will use a ½" thick backer panel.
- All columns with recessed panel with base cap trim will use a 5/8" thick column shaft and backer panel.






R* **Y**" R* **X**" X" + 3"*


*Tuscan, Chamfer & Solid Crown Add 4"

CUSTOM ORDER FORM: STRAIGHT

| CLIENT | PANEL SIZES |
|------------------|--|
| INFORMATION | 1. Height (Y") |
| Dealer Name: | 2. Width (X") |
| Project: | •Nominal •Actual 3. Inside Dims |
| PO#: | Natural (White) |
| Project Contact: | Paint Stain |
| - Date: | Colour: |
| Approved By: | REVEALS R* Top and Bottom Panel - Under 10' - 10" Reveal 6" & 8" wide, 9" Reveal 10" & 12" Wide - Over 10' - 15" Reveal 6" & 8" wide, 14" Reveal 10" & 12" Wide See page 10 for full details |

| PANEL PROF | <u>ILE</u> | QUANTITY: | | |
|--|--|-------------------------------------|--|--|
| 1. Plain | \Box | NOTES: | | |
| 2. Fluted 3. Raised 4. Recessed | | Panel Locks: M F | | |
| → Square Edge → Round Edge → w/ Base Cap Trim → Flush Trim → Raised Trim | 1. Single 2. Double 3. 1/3 - 2/ 4. Custon | Panel Panel Panel Panel Panel Panel | | |

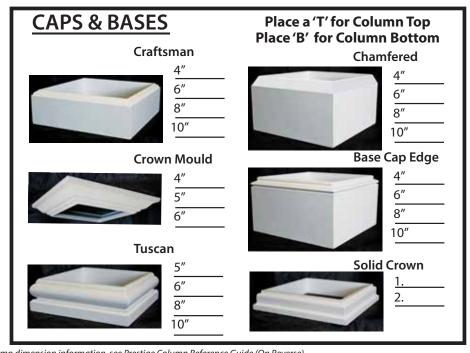

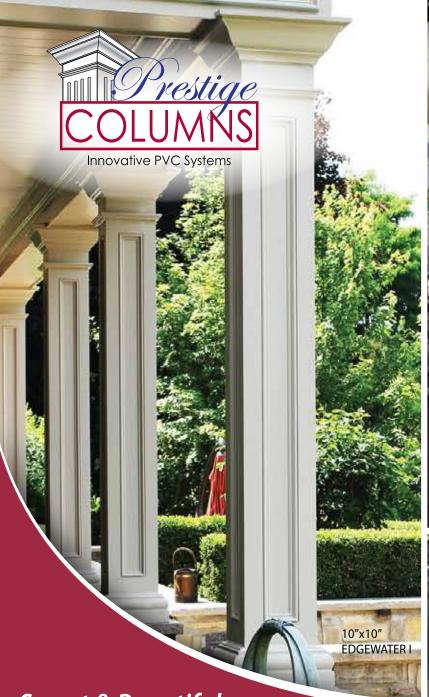




Prestige Columns™ feature beautiful, unblemished column panel faces. Each panel incorporates our innovative SmartLock™ Corner technology, resulting in a column that is assembled without the need for nails or screws marring the panel face.

The PREMIUM COLUMN STYLES™ reflects style of elegance that has been produced over the years for architects and builders as repeat custom profiles that have earned their place in the series.

Many Premium columns come in 8" to 14" widths and 8' to 12' heights. . Some styles come in larger standard format ie: Bluewater.

PREMIUM
COLUMN STYLES

10"x10"
UNIQUE FLARE I

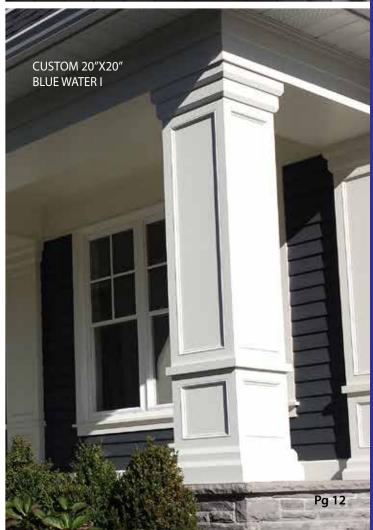

www.prestigediy.com



PREMIUM COLUMN STYLES



Cochren Flare I



Cochren Flare II



Bayside I



Bayview I



Edgewater I



Riverside I



Unique Flare I




Blue Water I



Lakeside I



Bayshore II



Contemporary Flare I



Contemporary Flare II

www.prestigediy.com





-FLEX-

Fast, Easy & Great Value!

Available in both tapered and non-tapered profiles,

Prestige FLEX Columns™ offers you the same great
look but with an *even better price point*. Made from
premium PVC, the SmartLock™ Corner system ensures
true, well-defined corners, and a fast & easy installation
while enhancing your homes exterior.

Prestige FLEX Columns™ are decorative columns only and are NON-LOADBEARING. If the column needs to support any weight, a sufficient load-bearing structural post must be in place before installation begins.

Available FLEX Column Profiles:

PVC, Square Plain Tapered 8"-12" for 4', 5' & 6' Heights **PVC, Square Plain** 6", 8" & 10" for 6', 8' & 10' Heights **PVC, Square Recessed,** 6", 8" & 10" for 6', 8' & 10' Heights

The Prestige Advantage

Beautiful

- Classic Architectural Look
- No Visible Fasteners


Guarantee 30 YEAR

Easy Installation

- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation
- Install Kit Sold Separately
- Easy Innovative Smartlock[™]

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints

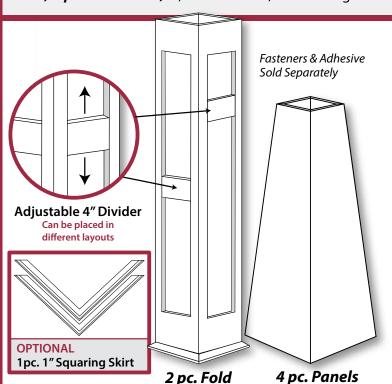



restige Installation Instructions

Square & Tapered Columns

NOTE: Your **Prestige Column**[™] is a decorative column only and is **NON-LOADBEARING.** If the column needs to support any weight, a sufficient load-bearing structural post must be in place before installation begins.


Your **Prestige Column™** has been designed for an easy, straightforward installation.

It is recommended that all products are pre-measured before installation to ensure fit around structure. i.e. 8" recessed columns do not fit around 6"x6" wood post. The user is responsible to verify sizes are appropriate.

You will need the following tools:

Power saw or woodworking handsaw







• Phillips drill-bit head and/or Phillips screwdriver



- Measuring tape
- Pencil

Column Components included:

4-Pc Column: • Four (4) Panels - Column Shaft • Two (2) - Column Skirts • Four (4) - Squaring Corners

NOTE: PVC adhesive and screws included. Some of the component edges may be sharp, so please handle with care.

Instructions


- 1 Begin by opening the cardboard packing & unfold for a protective work surface.
- **2** a) For both square & tapered columns, position bottom squaring corners at desired location around your structure.



For Tapered Columns Only

b) Mark the center of the two squaring corners on adjacent sides.

c) Run a level line from center mark of the bottom squaring corner of both adjacent sides to the top of the beam where the top Squaring Corner will be positioned.

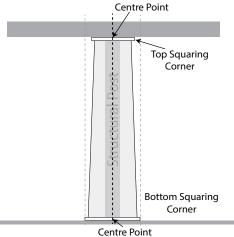

- Once the position of the squaring corners have been measured out and marked, install 1/2 of the top squaring corner into the predetermined position.
- 4 Measure height and cut column shaft 1/4" shorter for expansion/contraction. Cut from one or both ends on square decorative panels to balance reveals between skirt.

*IMPORTANT: For Tapered Columns, ONLY CUT FROM BOTTOM. ONLY the bottom skirts may be re sized for shorter column, not the top. You can cut all 4 shaft pieces at one time.

PRESTIGEDIY.COM

Rubber Mallet / Wood Block & Hammer

^{*} Some special equipment may be required depending on options selected.





Installation Instructions

Square & Tapered Columns

- 4-Pc Column a) Assemble 3 shaft sides, with 1 shaft w/female "smart lock" laying on cardboard box apply PVC adhesive down lock joints of either side. (FIG. 1)
 - b) Press a male smart lock shaft into matched female side. (Fig. 2)

NOTE: For painted columns, use a small amount of adhesive on the outside edge of the lock to avoid overflow on the painted surface. In some cases adhesive can adversly affect paint.












5 Position the 3 sided column into top squaring corner.

- **6** Position and install the lower squaring corner to match the top.
- Place the last shaft male panel on cardboard - set PVC adhesive down each Smart Lock joint.
- Align last column shaft panel into position. Using rubber mallet, tap top final panel to fit tightly.

Install 2nd squaring corner for both top and bottom. Ensure to use PVC adhesive on one half of each mitre.

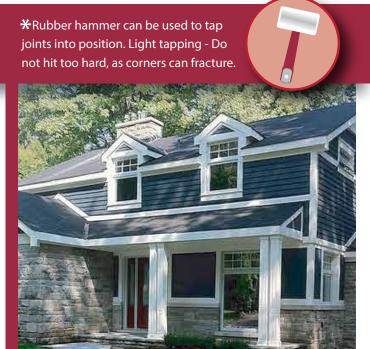








Installation Instructions

Square & Tapered Column Skirts

Before you begin your installation, it is recommended that you read these instructions completely. The tape adhesive on the cap and base panels bonds instantly and permanently, so proper positioning is essential to ensure a good fit.

NOTE: For tapered columns, if you cut the bottom column shaft panels, please follow resizing method for installation.

Bottom & Top Craftsmen Skirt - Ready to Fit Square Column

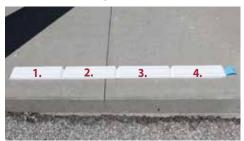


1 Take adhesive backing off panel #1, #2 and #4 (keep backing on #3 panel to allow for positioning).




2 Apply PVC adhesive to one half of each mitre.



3 Fold #1 and #4 onto the back of #2 and #3, then form a 90 degree corner.

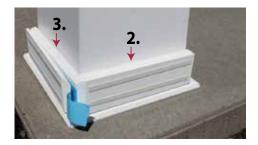


4 Slide #3 skirt against column. Bring #2 into contact with column. Press firmly.

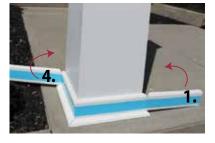

5 Unfold panel #1 and #4 into final position.

NOTE: Extra blue support tape can be used to hold the last corner together.

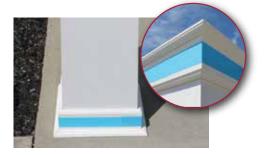

6 Bottom skirt is now complete. Repeat steps for top skirt.

Crown Install



Crown caps are designed to cover squaring corners. Install crown by applying supplied adhesive and hold in place with supplied blue tape or face nail.

Resizing Tapered Column Bottom Skirts

Before proceeding with the steps above, hold the skirt panels in final install positions to mark for cutting. Mark and cut at a 45° angle. It may be easier to cut panels #2 and #3 with a knife and install as 2 two-piece sections. Be sure to pull off the blue support tape, which can be reused to hold miters together without the need of external fasteners.

Congratulations, your Prestige Column™ should now be complete and ready to enjoy. While painting is not required, your column can be painted a wide variety of colours. For more information, please see the available painted instructions. In some cases exposed cell structure can hold dirt. For optimal appearance painting can be considered.

For warranty, visit us at:

WWW.PRESTIGEDIY.COM







P R E M I U M
c o l u m n s t y l e s



- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles

Easy Installation

- Decor and Distinctive Collections are Complete Kits, with Fasteners
- Flex Collection includes Adhesive, (installation hardware not included)
- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints

Prestige Shutters are available in two style categories to best accommodate our customers needs.

The **DISTINCTIVE COLLECTION** is made with true <u>traditional rail</u> <u>and stile</u> construction creating a strong, durable shutter to enjoy for years to come.


The **DECOR COLLECTION**, <u>at a lower cost</u>, shows a beautiful traditional profile but is manufactured using a single PVC sheet with the profile engraved directly to the surface.




All shutters are custom ordered to the 1/8" (width and height) to suit your project.


DECOR COLLECTION

At a lower cost




Flat Panel









(Routered)



Standard Measurements for **Decor Collection** & Distinctive Collections.

Thickness: Vertical Stile Width: 2 1/2"


Top Rail Height: 2 1/2"

Middle Rail Height: 2 1/2"

3 1/2" Bottom Rail Height:

DISTINCTIVE COLLECTION

Traditional Rail and Stile

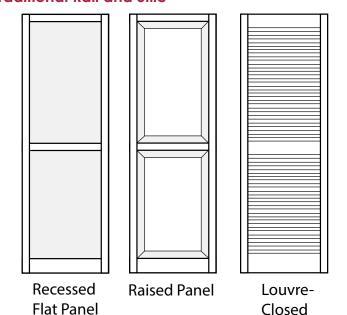



Decor Collection -Raised Panel

Distinctive Collection -Raised Panel

Closed Louvre





Beautiful

- · Classic Architectural Look
- No Visible Fasteners

Guarantee 30 YEAR

Easy Installation

- Adhesive included, (installation hardware not included)
- · No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation

Virtually Maintenance Free

- · Free-Foam Cellular PVC Construction
- · Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints


www.prestigediy.com



The **FLEX COLLECTION** is a cost effective, versatile shutter allowing for a <u>cut-to-suit</u> product. Each, easy to assemble, shutter comes with a <u>reversible panel</u> with flat, louvered and v-groove styles. Available in 16" wide by 4', 5' or 6' heights that allow you the flexibility to cut the height to fit your home!


** Panel and Rails are easily cut to any length **

Shutter Panel Styles:

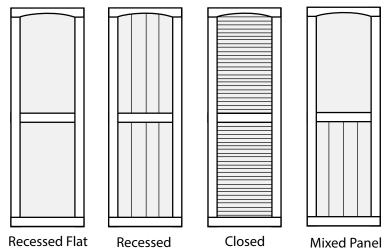

Shutter Top Frame Options:


V-Groove



Louvre






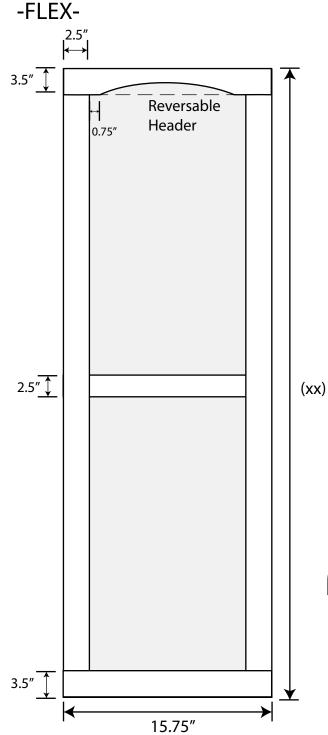


RECESSED PANEL STYLES (P):

STYLE #1 - (V)- Plain Panel w/ Reversible V-Groove STYLE #2 - (L)- Plain Panel w/ Reversible Closed Louvre

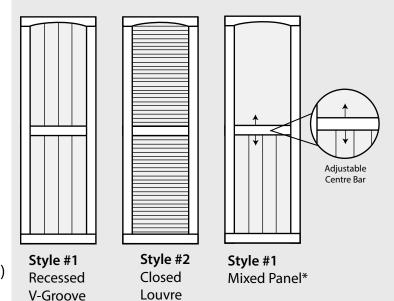

Panel Sold in pairs. **Panel**

TOP FRAME OPTIONS (C):

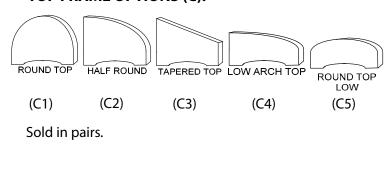

Product Code: SFV-16(xx) or SFL-16(xx) (xx) height = 48° , 60° or 72°



^{*} Mixed Panel uses Style #1- Cut in half and bottom reversed.



















Many can be Flat Packed for easy shipping.

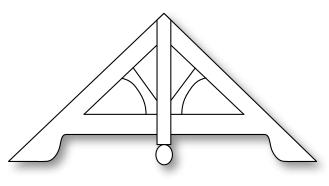


www.prestigediy.com

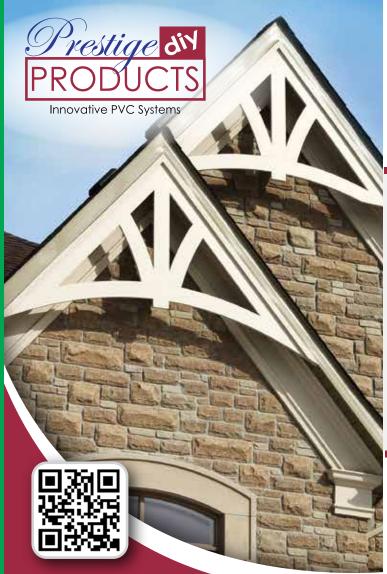



Quality is found in **Prestige DIY Product™** styling which accents any home with character and charm. Whether the solution is a desire to achieve a faux look to last a lifetime or a complex craftsmanship solution built in traditional style, **Prestige GABLES™** are engineered to last!

A few of our standard styles...

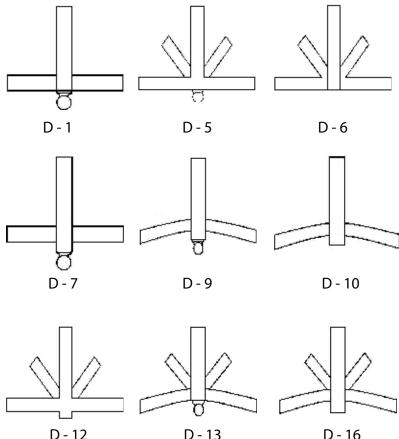

Full line up of styles available on the reverse.

The Prestige Advantage

Beautiful

- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles
- Available in Smooth or Wood Grain



Easy Installation

- Complete Kit, with Assembly Fasteners & Adhesive
- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation
- Installation Fasteners (Sold Separately)
- Installation Track (Sold Separately)


Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints


www.prestigediy.com




Gable Detail Styles




D - 1 (iT-b)




D - 2 (iT)




D - 3 (iTa-b)




D - 4 (iTa)




D - 5 (iTv-b)




D - 6 (iTv)




D - 7 (iC-b)




D - 8 (iC)




D - 9 (iCa-b)




D - 10 (iCa)

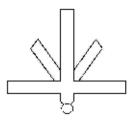


D - 11 (iCv-b)

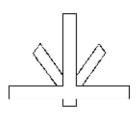


D - 12 (iCv)




D - 13 (iTVa-b)



D - 14 (iTVa)



D - 15 (iCVa-b)




D - 16 (iCVa)

Each style is available in both G1 & G3 details.*

*See specifications sheet for G1 & G3 details. (Page 24)


Many can be Flat Packed for easy shipping.

For custom orders, please contact your local contractors desk or visit us at www.prestigediy.com to request quote.

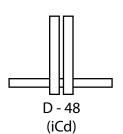





Gable Detail Specifications

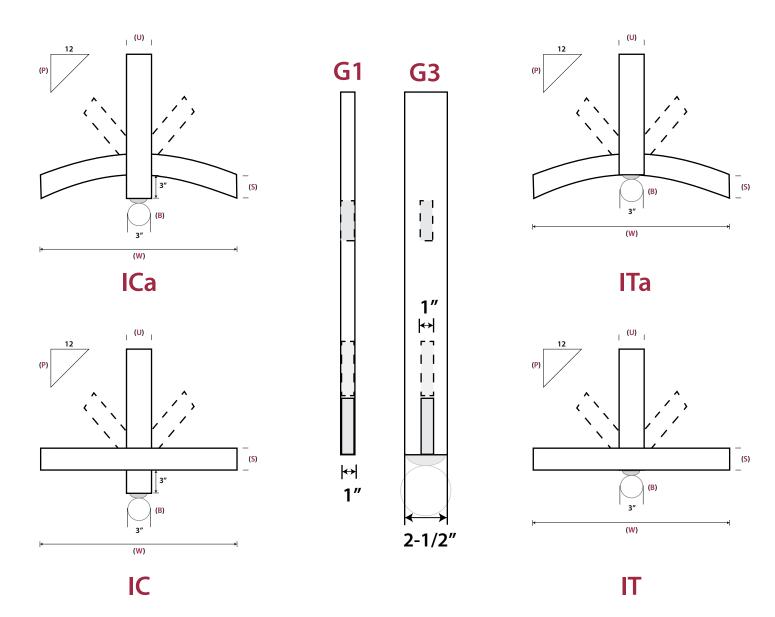

Understanding your Prestige Gable Detail product code.

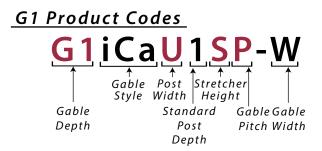


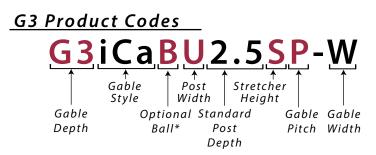

^{*} Only applicable to those Gable Detail Styles that include these elements.



Gable Scroll Styles

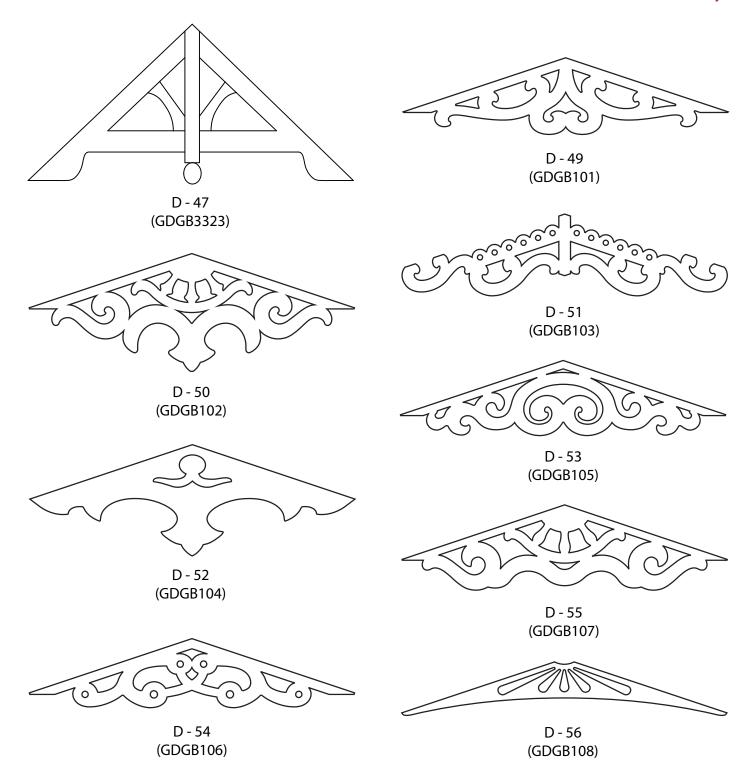

Each scroll style is available as a G1 detail.*

*See specifications sheet for G1 details. (Page 24)

Note: D-47 (GDGB3323) has a 2" post.

For custom orders, please contact your local contractors desk or visit us at www.prestigediy.com to request quote.



Assembly & Installation Instructions


Congratulations on your purchase of your new Prestige Gable[™] Detail. These gables are designed to bring a classical architectural design to your home, and are engineered for easy installation. Before you begin your install, please take a few moments to unpack and review the contents of your package. Each Gable Detail will be installed behind the fascia board. You will need different fasteners depending on the application.

Note: The below installation instructions are suggested practices only. Fastener length may vary depending on product

purchased. Ensure for 1" penetration into wood structure.

Materials Included:

- One (1) gable post with mounting block
- Two (2) gable stretchers
- Four (4), #8, 3" galvanized wood screws
- Three (3) screws per side of stretcher

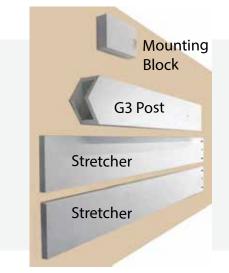

V

Note: Gable Detail shown is 6"(5.5" actual) size. 4"(3.5" actual) is also available

Gable Detail: Assembly





- On a clean flat surface, layout the gable detail parts.
- Using spacers to adjust the depth, place the two gable stretchers at the desired height from the bottom of the gable post or line up with pre marked holes.

It is recommended not to exceed 4" from the bottom of gable post.

• Using the #8 galvanized wood screws provided, toe screw the stretcher to the middle gable post. The holes are pre drilled for easy assembly.



Pg 29

Gable Detail: Installation Instructions

- Once the gable detail is assembled, remove the mounting block positioned in the gable post.
- Using the four (4) 3" #8 galvanized wood screws provided, fasten the mounting block to the top gable peak sub-fascia.
 - ** Best method is to screw two (2) from back of fascia and two (2) from the front.**
- Once mounting block is secured, with stretchers attached, slide gable post over block and fasten to the mounting block using four (4) 2" #8 galvanized wood screws.
 (Fasteners not included)
- Once gable post has been fastened to the mounting block, level post before fastening stretchers to sub fascia.
- By screwing two (2) screws into both the front and back, you securely lock the gable into place both ways.







Installation Track Instructions:

Installation
Track
Step 1

Step 1


For installation where soffits have already been installed, an installation track is recommended.

Step 1: Install track into roof line using 2-1/2" screws minimum, insuring your fasteners reach

Step 2: Measure and trim gable detail to fit.

into structure. (Fasteners not included)

Step 3: Install gable detail into track screwing fasteners from the back. Toe screw the stretchers into the structure of roof using 3-1/2" screws. (Fasteners not included)

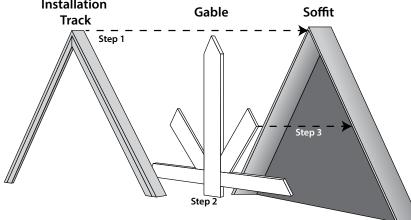

Congratulations, your Prestige Gable is now completely installed and ready to enjoy. While not required, your gable can be painted.



- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles

Guarantee 30 YEAR

Easy Installation

- Complete Kit, with Fasteners & Adhesive
- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- · Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints

www.prestigediy.com


Quality is found in all **Prestige DIY Products**[™] which are manufactured from premium PVC. **Prestige LOUVRES**[™] come in various styles and shapes that will add a timeless look of elegance and beauty to your home.

Whether the solution is a desire to achieve a faux look to last a lifetime or a complex craftsmanship solution built in traditional style, **Prestige LOUVRES**[™] are engineered to last!

Innovative PVC Systems




Louvre Styles & Specifications

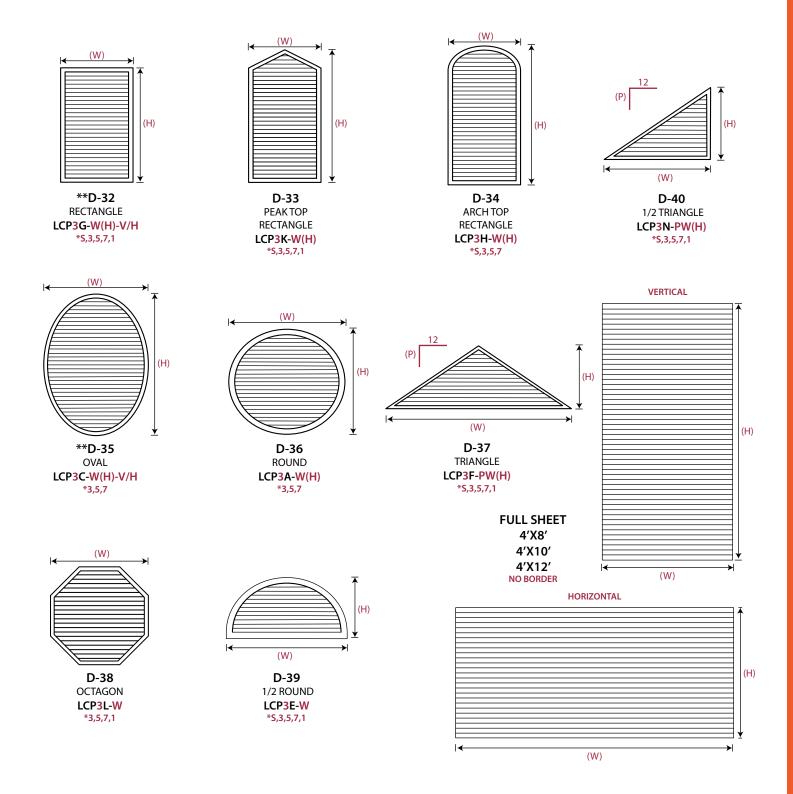

























Some styles may be used with metal structure.



www.prestigediy.com



Beautiful

- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles



Easy Installation

- No Special Tools Needed
- Installation Blocks (sold separately)

Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- · Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints

Innovative PVC Systems

Quality is found in all Prestige DIY Products™ which are manufactured from premium PVC.


Prestige BRACKETS™ come in various styles and

shapes that will add a timeless look of elegance and beauty to your home.

Prestige BRACKETS™ are available as faux decorative for a fast and easy to install or can be ordered with metal inserts for structural support.





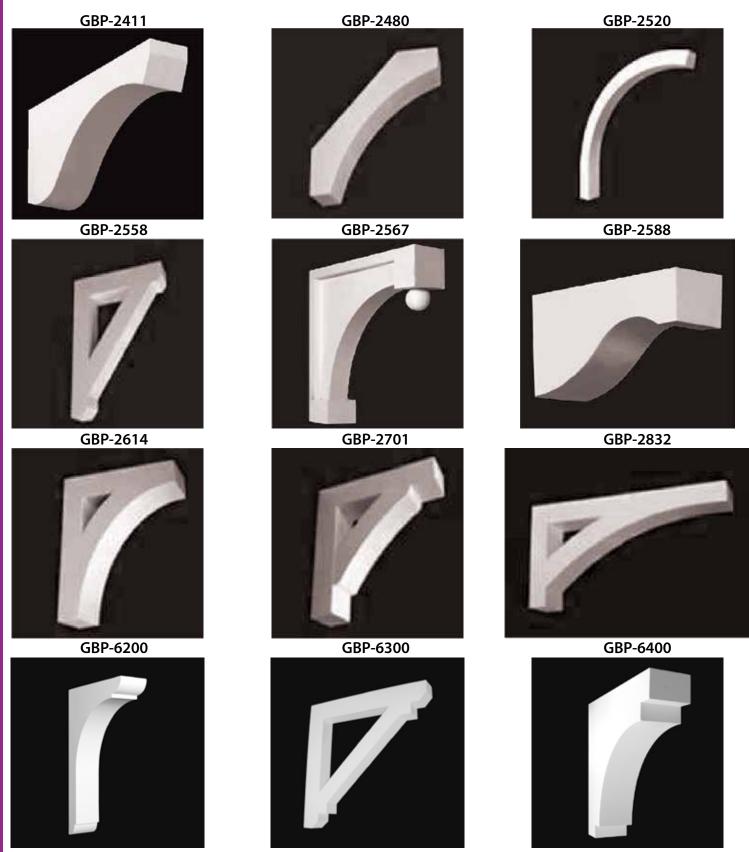

Pg 35



Innovative PVC Systems


GBP-2948



GBP-5600



GBP-5900

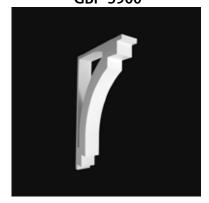

GBP-1211



GBP-5400




GBP-2650



GBP-6000



GBP-1707

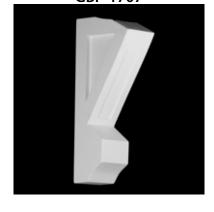

GBP-5500



GBP-5800



GBP-6100-2



GBP-6100



Pg 36



- Classic Architectural Look
- No Visible Fasteners
- Wide Assortment of Styles

Easy Installation

- Sold Individually or in Kits
- No Special Tools Needed
- Flat-Pack for Safe & Easy Transportation


Virtually Maintenance Free

- Free-Foam Cellular PVC Construction
- Weather, Decay and Insect Resistant
- Paint Friendly with Acrylic Latex Paints

Prestige Soffit Panels™ are an improved soffit system that allows for maximum airflow. Our vented soffit has an 8/4 repeating pattern that provides 10 square inches of free air space per lineal foot. Our innovative nature allowed for another solution for a quick and easy installation.




www.prestigediy.com

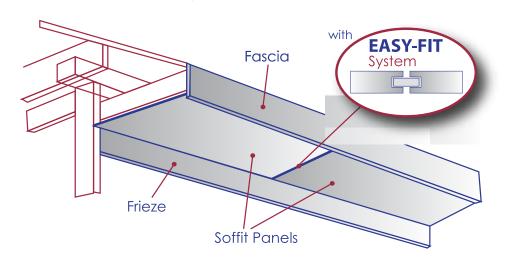




Available Panels



Vented Panel



Standard Measurements for **Prestige Soffit Panels™**

Panel Thickness: 1/2"
Panel Widths: 12", 16" & 24"
Panel Lengths: 48"
PVC Spline: 3/8" x 1"

Transition Corner Panel Spline Bar *Adjustable to fill soffit angles

Note: Our vented soffit has an 8/4 repeating patter to provide 10 Sq. in. for free air space per lin. ft.

What Makes the Prestige Soffit Panels Different?

- Standard 12", 16" and 24" widths, 4' lengths
- Architectural accent joints located at 4' intervals
- Easy- Fit system installs without the need for joint finishing
- Easy, quick installation
- Made from premium 1/2" PVC
- Transition Corner Panels allow for easy installation
- Custom radius options available
- Available in natural white or painted to match





Prestige Soffit System Installation Guidelines

- The Vented Soffit has an 8/4 repeating vent pattern that provides 10 square inches of free air space per lineal foot.
- Vents can be screened if required by code or to minimize insect infiltration.
- The Notched Fascia requires no flashing or cover.
- Notched Fascia and Frieze Boards have a 9/16" plowed pocket to accept ½" soffit.

General Soffit System Installation

- If required by code, insect screen can be secured to the backside of the soffit panel using various construction adhesives and/or staples.
- Prestige assumes no responsibility for moisture infiltration.
- Take special care not to damage or break the cellular PVC Slats between the vents. Avoid cutting through the vented areas.
 If unavoidable, take special precautions to protect slats.
- The notched fascia should extends ½" below the soffit forming a natural dip edge.
- At all Notched Fascia and Frieze/Rake Board joints, use a shiplap joint.
 A Shiplap is not only stronger, but also hides unslightly gaps in the trim.
- Before installing the PRESTIGE Soffit System, make sure the ends of the rafter tails are aligned and in the same plane.

Eave Application

Step 1: Fit your PRESTIGE Soffit panel to the overhang making sure the outside edge of the soffit projects 7/16" beyond the subfascia. Position the slotted vents towards the outside of the eave for optimal air flow.

Step 2: Secure the Soffit to the underside of the subfascia and to the framing member along the other edge of the soffit panel at the frieze. Fasteners should be 4d or 5d stainless steel nails or trim screws spaced 12" on center at all panel edges and at all intermediate supports. Reduce spacing to 6" on center if soffit is not supported by fascia and frieze.

Step 3: Always use the PRESTIGE Tongue and Groove System

between two soffit panels and the PRESTIGE Transition Corners at all soffit bends/corners. See page 37 for cutting the panels to fit.

Step 4: If using a stealth trimboard for the frieze board, make sure the long flat edge of the trim butts tight against the soffit panel with the siding pocket on the stealth trim at the bottom and against the exterior wall for accepting siding.

Step 5: Fasten the Frieze Board to the wall studs with 8d stainless steel nails with annular threads and blunt points or trim screws spaced a maximum of 16" on center.

Fastening Schedule

| BoardWidth | Fasteners per width a maximum of every 16" on center |
|------------|---|
| 12" | 3-4 |
| 16"& 24" | 4-5 |

Step 6: Install the notched fascia board on top of the subfascia.

Align the pocket with the projecting edge of the PRESTIGE Vented Soffit panel before fastening it to the face of the subfascia. To reduce linear movement in the fascia board, glue it to the subfascia with a construction adhesive like Liquid Nails Sub-Floor or Heavy Construction Adhesive.


Step7: The top edge of the fascia can be flashed with a piece of undersill trim or hidden behind a drip edge or other roof edge flashing. Be sure the edge angle on the soffit panel is cut to the same slope as the roof where two soffit panels abut.

Rake Application

Step 1: Install the Frieze Board by placing it tight against the wall. Be sure the siding notch is at the bottom with the plowed soffit pocket at the top on the board facing away from the house so it can receive the soffit panel. Be sure the top of the plowed soffit pocket on the Frieze Board aligns with the bottom of the barge rafter.


Follow Steps 2 through 7 for Eave Application.

Soffit System Installation Detail

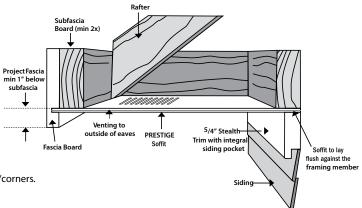



Rake Installation Detail

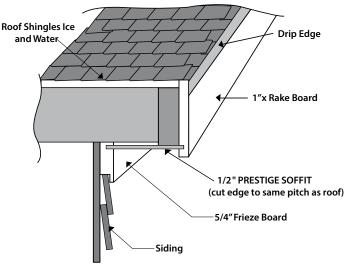



Tips when Installing PRESTIGE SOFFIT System

- When starting to install, first measure out your PRESTIGE SOFFIT System to confirm if any pieces will have to be cut.
- Always use a PRESTIGE SOFFIT Transition Corner with the Easy Installation
 Tongue and Groove System, rather than mitring the soffit at corners.
 Transition Corner is adjustable to match soffit angle.
- When having to cut the PRESTIGE SOFFIT to fit, eliminating the original groove, turn soffit panel on edge and cut new groove on table saw.

Always remember to size the panel and cut between the vents.

- Make sure the soffit panel is fully engaged into the plowed slot on the fascia & frieze board and the PVC tongue is firmly in the groove ready to accept the next PRESTIGE SOFFIT panel.
- When using PVC notched fascia and frieze boards with the PRESTIGE SOFFIT System, building the soffit system on the ground and installing it as one piece is not recommended. The soffit overhang is not going to be a perfect 90 degree angle, so it is best the three components be installed individually so they properly conform to the walls of the building.

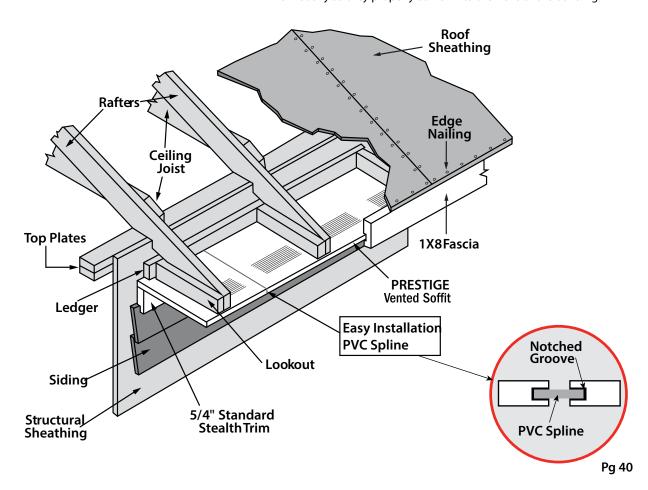

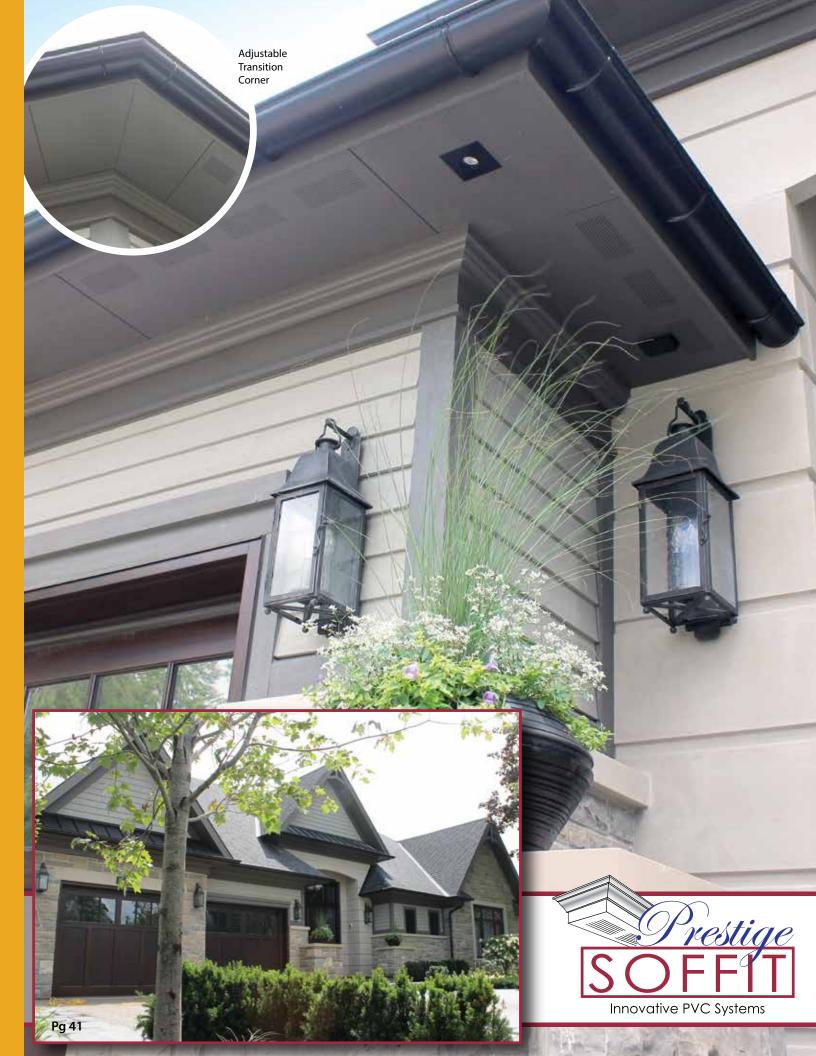















Custom Requests:Columns w/screen pocket, Newels & all pre-finished exterior material trim packages. (trim for fascia, crown, beam, soffit)











LIMITED WARRANTY - PRESTIGE DIY PRODUCTS™

1357042 Ontario Limited (hereinafter "Décor Innovations") warrants to the original consumer purchaser (the "Original Consumer Purchaser") and only to the extent set forth below, its successor and assign (together with the Original Consumer Purchaser, the "Consumer Purchaser"), subject to the terms and conditions herein, that each PRESTIGE DIY PRODUCTS™ Product, as shipped, will be free from manufacturing defects that cause the Product to delaminate, decay, rot, corrode or swell excessively from moisture for a period of thirty (30) years from the date of the original purchase from an authorized PRESTIGE DIY PRODUCTS™ dealer (the "Original Purchase Date"). Each Consumer Purchaser of PRESTIGE DIY PRODUCTS™ shall have sole responsibility for making determinations as to the suitability, effectiveness, and safety of any particular use or application of the PRESTIGE DIY PRODUCTS™. As building code regulations may vary from area to area, each Consumer Purchaser should consult local building and safety codes for specific requirements.

Value added paint options come with a 5 year limited warranty.

ADDITIONAL CONDITIONS AND EXCEPTIONS

In all events, Décor Innovation's sole and exclusive liabilities under this warranty are limited solely and exclusively to replacement of defective PRESTIGE DIY PRODUCTS™, or the issuance of a refund equal to the original cost of the PRESTIGE DIY PRODUCTS™. Under no circumstances shall Décor Innovations be liable for labour, installation, reinstallation, freight, taxes or any other charge related to defective PRESTIGE DIY PRODUCTS™. Décor Innovations shall not be liable under any circumstances for any indirect, incidental, punitive, consequential, exemplary or other damages of any kind whatsoever, whether any such claim is based upon theories of contract, warranty, negligence, tort strict liability or otherwise. This warranty does not provide protection against any failure of, defect in or damage to PRESTIGE DIY PRODUCTS™ caused by situations beyond normal exposure conditions, including but not limited to the following: intentional or unintentional misuse, abuse, neglect, or improper handling or storage; impact of foreign objects; earthquake, lightning, ice, fire, tornado, windstorm, flood, among others or any other acts of God; improper installation of the PRESTIGE DIY PRODUCTS™ or its structural supports, or installation not in strict adherence to Décor Innovation's written instructions; cracking, distortion, movement, settlement, or warping of the PRESTIGE DIY PRODUCTS™ structural supports or accessories used in connection therewith; insurrection, terrorism, acts of war, riot, vandalism, improper maintenance, use of incompatible accessories; or other products that cause a PRESTIGE DIY PRODUCTS™ defect or failure to occur; pollution, acid rain, contact with harmful chemicals or vapors; or ordinary and expected weathering due to exposure to the elements; which for purposes of this Warranty is defined to be fading, chalking or darkening of the surface of the Product due to exposure to natural sunlight and extreme atmospheric conditions that are unique to and may vary depending on geographic location. Décor Innovations shall have sole discretion to determine, based on reasonable criteria, whether the PRESTIGE DIY PRODUCTS™ is suffering from normal weathering. This Warranty does not cover painted finishes or coating applied to PRESTIGE DIY PRODUCTS™ by the Consumer Purchaser or any third party. Failure to adhere to Décor Innovation's recommended guidelines for application of painted surfaces shall void this Warranty. All claims under this Limited Warranty must be made within 90 days from the time that the defect is discovered and while the PRESTIGE DIY PRODUCTS™ is in place. Consumer Purchaser shall provide Décor Innovations and its agents and employees with a reasonable opportunity to inspect and test the PRESTIGE DIY PRODUCTS™, its installation, and the environment in which the Consumer Purchaser used it prior to removal so that Décor Innovations may determine what replacement, if any, may be needed. In the event that Décor Innovations determines that a replacement is appropriate, Décor Innovations shall have the option of retaining all material that is replaced. If Décor Innovations replaces any material under this warranty, it may substitute products designed by Décor Innovations to be of compatible quality or price range in the event that the product initially purchased has been discontinued or modified. Anything less than strict compliance with these notice and inspection provisions shall serve to void all warranties with regard to PRESTIGE DIY PRODUCTS™. This Warranty may not be altered or amended except in a written statement signed Décor Innovations and Consumer Purchaser. Décor Innovations has not authorized any dealer or other person to make statements or representations regarding the performance of PRESTIGE DIY PRODUCTS™ except as contained in this Warranty, and Décor Innovations shall not be bound by any such statements other than those contained herein.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER APPLICABLE WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE.

This Warranty is transferable to a successor by the Original Consumer Purchaser with the transfer of other conveyance of the PRESTIGE DIY PRODUCTS™ and shall not be transferable or assignable by any subsequent consumer purchaser. In accordance with the foregoing, this Warranty shall expire upon the first to occur of: (i) the transfer or other conveyance of the PRESTIGE DIY PRODUCTS™ by the Original Consumer Purchaser's successor or assign; or (ii) thirty (30) years from the Original Purchase Date.

Some states and provinces do not permit limitations on the duration of implied warranties or exclusions or limitations of incidental or consequential damages, so certain limitations set forth in this Limited Warranty may not apply to you. This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

FILING A WARRANTY CLAIM

To file a claim under this Warranty, Consumer Purchaser must send proof of purchase, a photograph of the defective PRESTIGE DIY PRODUCTS™ and a written description of the nature of the defect to the company's corporate address in Oakville, ON. (See address below). Décor Innovations reserves the right to investigate any claim hereunder. Upon verification of the claim, Décor Innovations shall, at its sole discretion, either arrange for the delivery of replacement Product or issue a refund equal to the original cost of the Product only. In either instance, Consumer Purchaser shall allow Décor Innovations at least ninety (90) days for investigation and either replacement or refund.









Innovative PVC Systems

• 423 Wyecroft Road, Unit B, Oakville, ON L6K 2H2 • Ph. 289-291-9006 F. 289-291-7948

www.prestigediy.com