




Assembly & Installation Instructions G4 & G6

Congratulations on your purchase of your new Prestige Gable™ Detail. These gables are designed to bring a classical architectural design to your home, and are designed for easy installation. Before you begin your install, please take a few moments to unpack and review the contents of your package. Each Gable Detail will be installed behind the fascia board. The below install instructions are specific to G4 & G6 Gable Details.

Note: The below installation instructions are suggested practices only. Fastener length may vary depending on product purchased. Ensure for 1" penetration into wood structure.

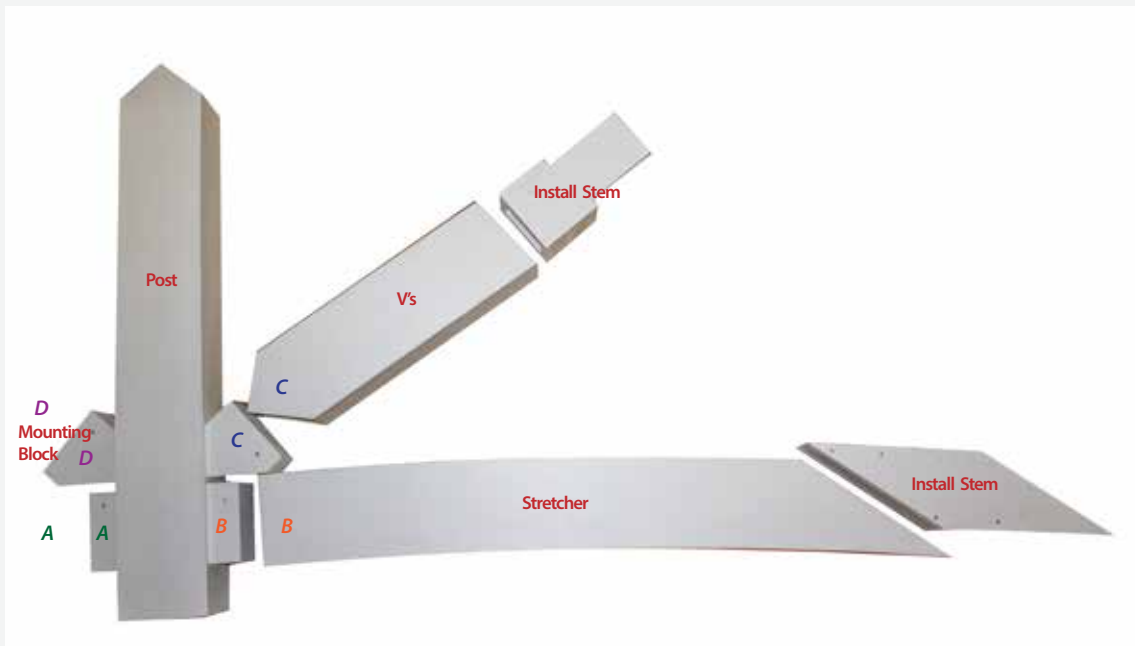


Materials Included:

- One (1) gable post with install stem and mounting blocks (For G4 & G6)
- Two (2) gable stretchers with install stem
- #8, galvanized wood screws for assembly included
- Optional "V" stretcher with install stem




*Installation Fasteners not supplied.
#8 Wood Screws typically 2" Long Required

Gable Detail: Assembly

Note: Gable Detail shown is 6"(5.5" actual) size.

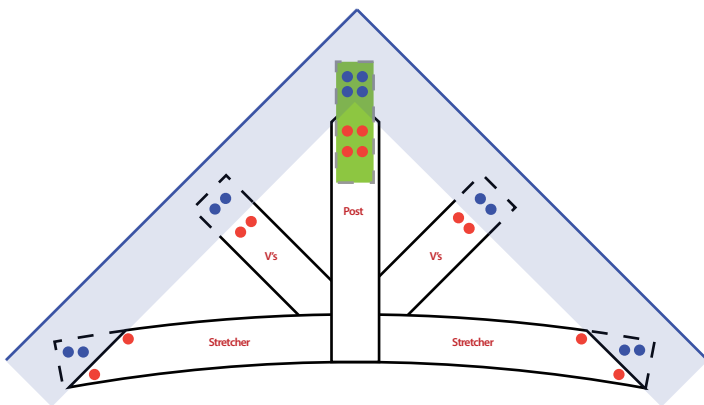

- 1 On a clean flat surface, layout the gable detail parts.
- 2 Layout, post and position stretchers with verticals to matching letters
- 3 Remove the #8 galvanized wood screws from the mounting blocks on the post (fig 1)
- 4 Slide the stretcher over the mounting blocks on the middle gable post. The holes are pre drilled for easy assembly. (fig 2)
- 5 Fasten both stretchers and "V" (if applicable) to either side of the gable post. (fig 3)

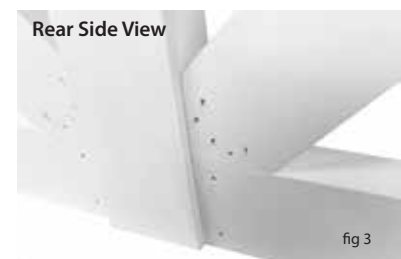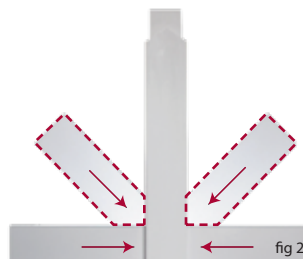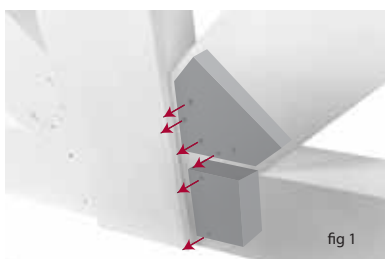

Gable Detail: Installation Instructions G4 & G6 (cont)

- Once the gable detail is assembled, remove the install stem positioned in the gable post. See detail (1)
- Using four (4) #8 x 2" galvanized wood screws fasten the install stem to the top inside gable peak sub-fascia. (fasteners not included). Ensure to use a level to set after 1st screw is in place.
- Sliding assembled Gable into place to prefit will reveal if any stretchers require resizing. If a shorter post is desired it can be cut. (ensure that you match your required roof pitch)
- If Stretchers require resizing, remove install stem from stretcher, cut to the needed length and reinstall the install stem.
- Once install stem is secured in the stretchers, slide gable post over stem and fasten post to the install stem using four (4) 2" #8 or #6 galvanized wood screws. (Fasteners included)
- Once gable post has been fastened to the install stem, level post before fastening stretchers to back of sub fascia. Stretcher install stem should lie flat with fascia. (see attached diagrams fig 4)
- Secure All stretchers install stems with two (2) screws from the back, you securely lock the gable into place both ways.

Congratulations, your Prestige Gable is now completely installed and ready to enjoy. While not required, your gable can be painted.

Go to <https://prestigediy.com/resources/>
To view paint type and application instructions



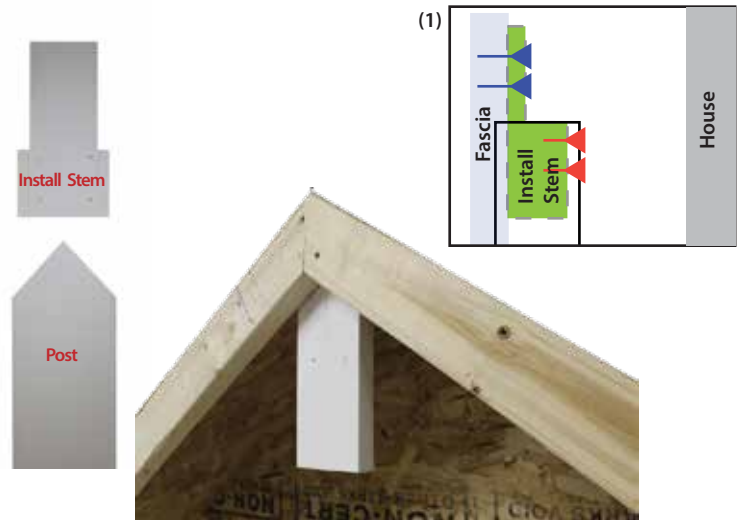


fig 4

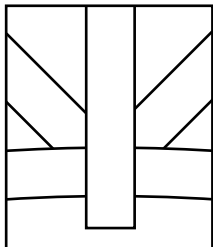

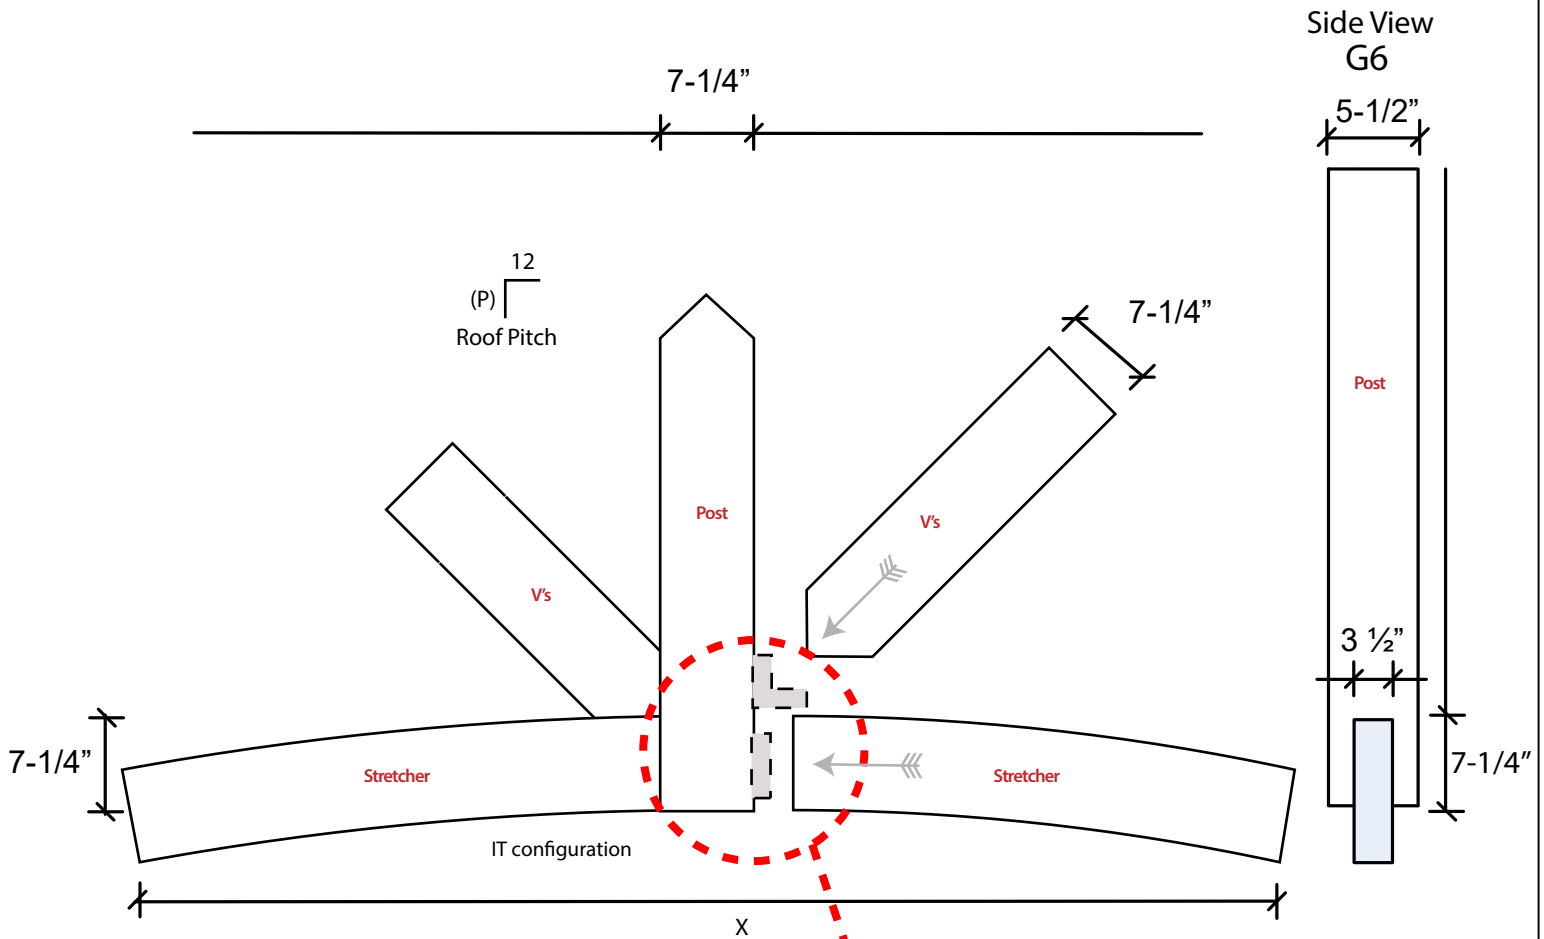


IC configuration


Installation fasteners schedule
(not included)

Use #8 non-corrosive screws

Gable Size	Screw Length
G1	2"
G3	2"
G4	2"
G6	2"

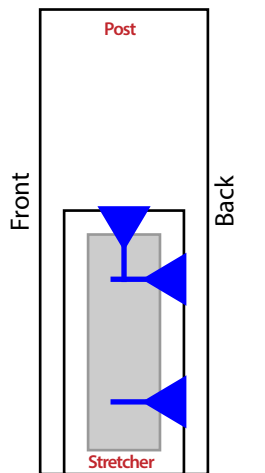

Assembly Fastener layout Side view

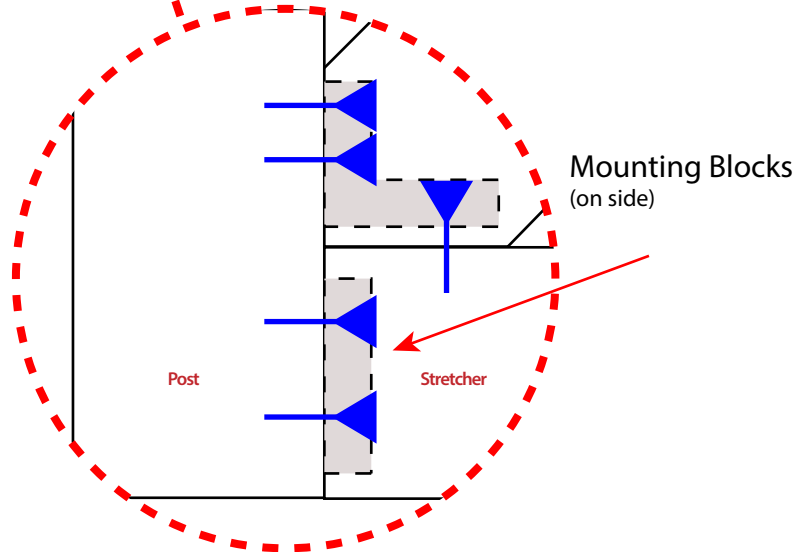

Assembly Fasteners (Included)

Prestige **diy**
PRODUCTS
Innovative PVC Systems

Prestige
GABLES
Innovative PVC Systems

CUSTOMER APPROVAL

G6ITVA/G6ICVA-X

G6 Gable Inverted T or C arched



Date: Nov 27, 2020

DATE

Material: PVC

Scale: Not to scale

Texture: Smooth

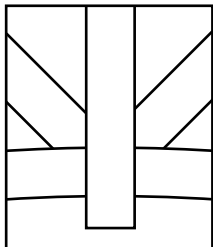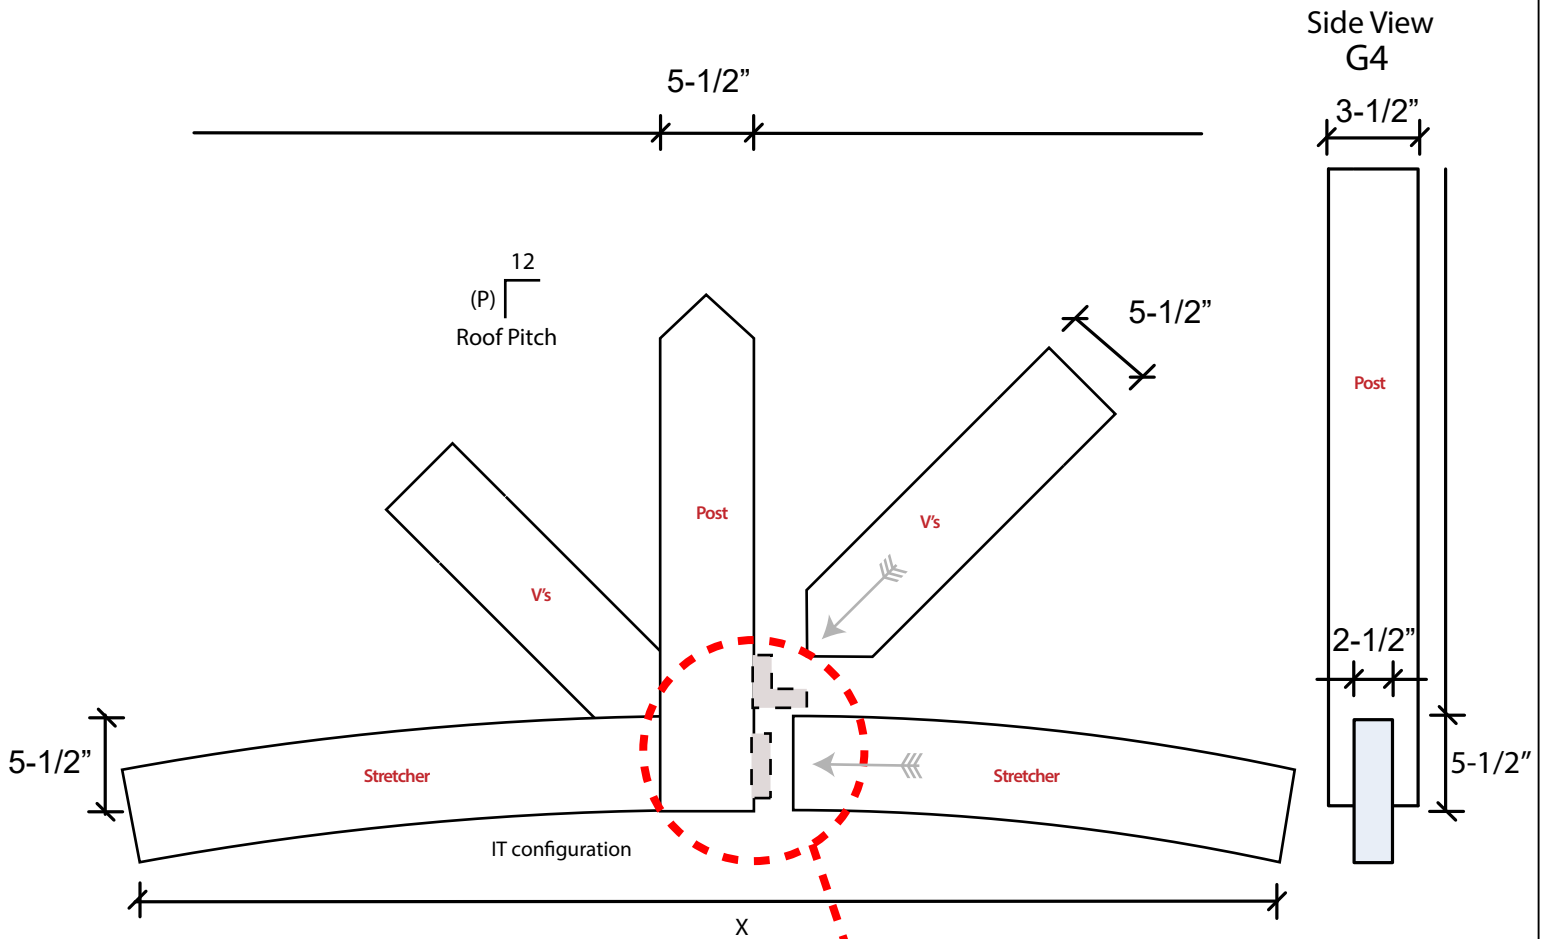


IC configuration


Installation fasteners schedule
(not included)

Use #8 non-corrosive screws

Gable Size	Screw Length
G1	2"
G3	2"
G4	2"
G6	2"

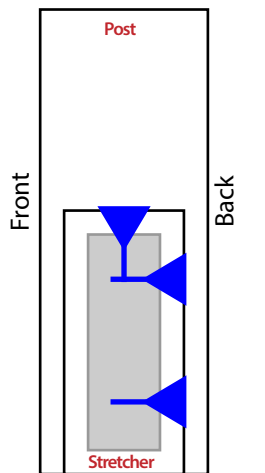

Assembly Fastener layout Side view

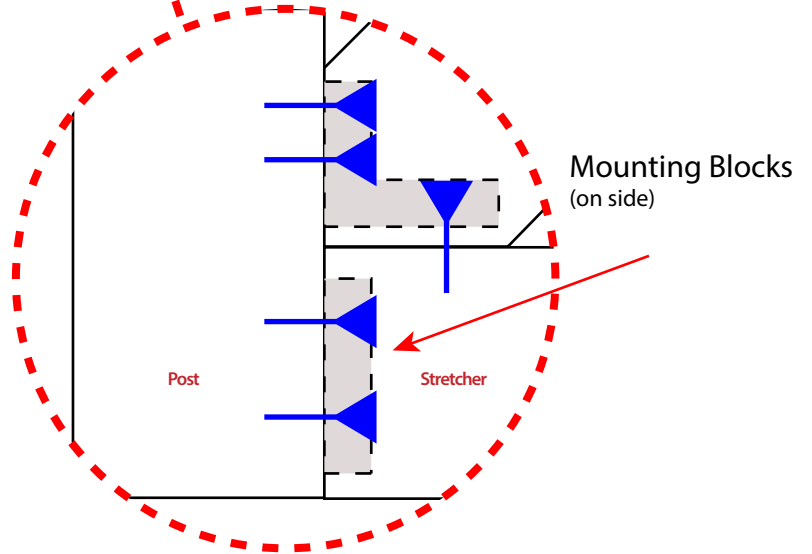

Assembly Fasteners (Included)



Innovative PVC Systems



CUSTOMER APPROVAL

G4ITVA/G4ICVA-X

G4 Gable Inverted T or C arched




Date: Nov 27, 2020

DATE

Material: PVC

Scale: Not to scale



Texture: Smooth

- 2x6 fascia 
- Install Stem 
- Mounting Block 

G1
G1 gables does not have an install stem, and installs directly to the back of the fascia



G3
G4
G6
Side View

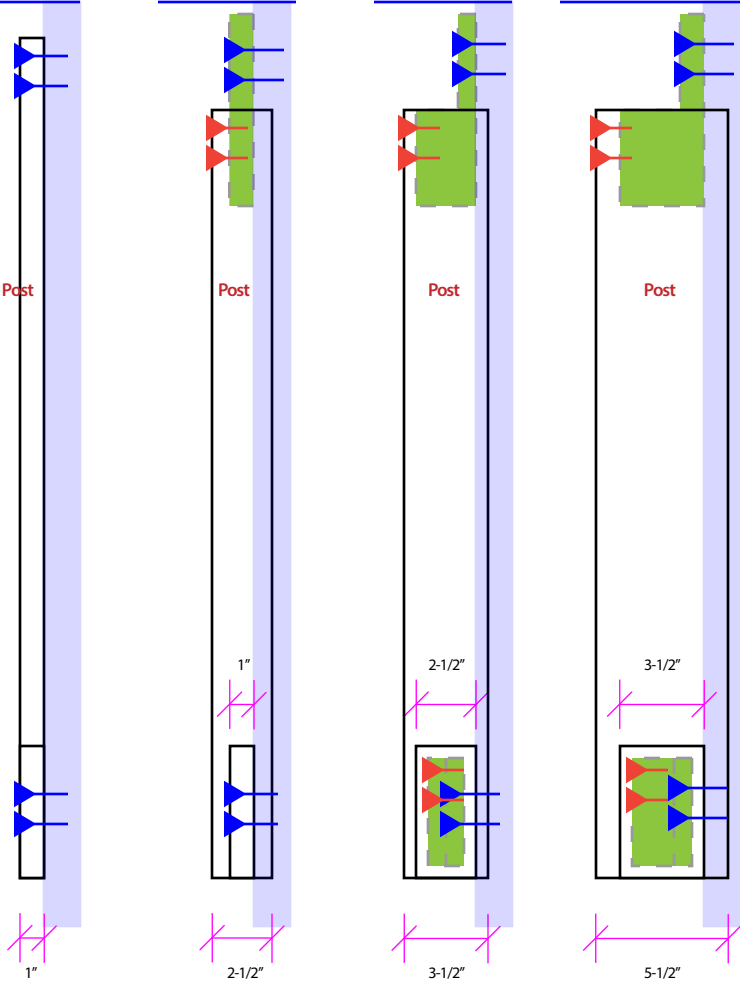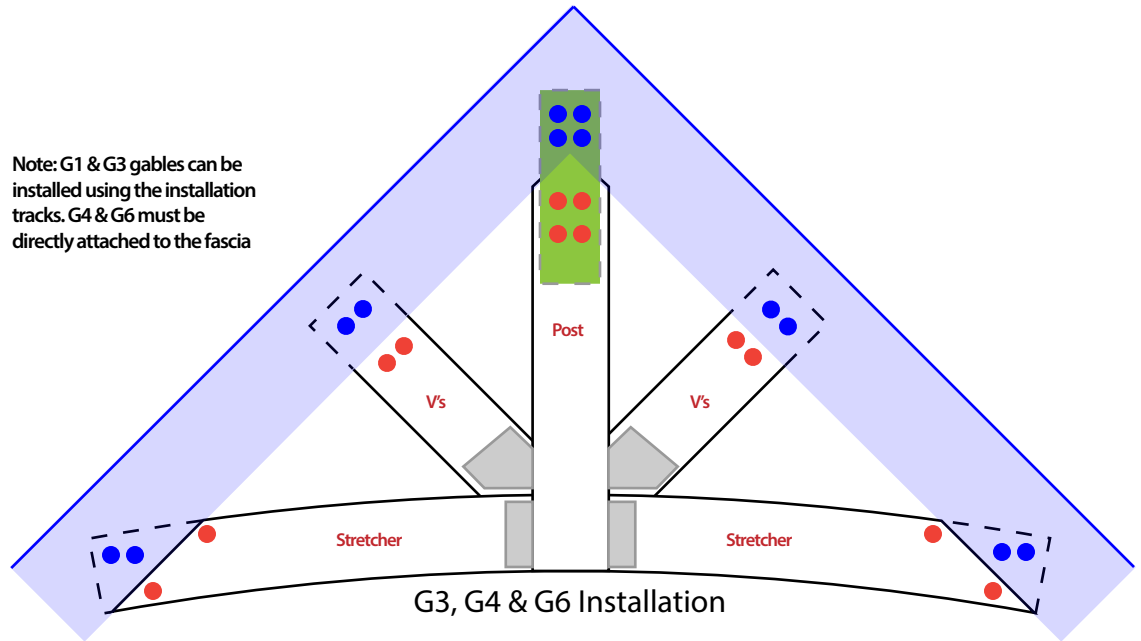Note: G1 & G3 gables can be installed using the installation tracks. G4 & G6 must be directly attached to the fascia



Installation fasteners schedule (not included)	
Gable Size	Screw Length
G1	2"
G3	2"
G4	2"
G6	2"

Gable stretchers can be fastened from the front of fascia if decorative fascia is not installed, otherwise it can be installed from the back

-  Installation Fasteners (not included)
-  Assembly Fasteners (#1 Robertson included)

Prestige **diy**
PRODUCTS
Innovative PVC Systems
www.prestigediy.com

Prestige
GABLES
Innovative PVC Systems

CUSTOMER APPROVAL

DATE

Gable Installation

Installation with Install Stems

Date: Dec 16, 2020

Scale: Not to scale

Material: PVC

Texture: Smooth